

Installation Guide

CTMULTILEAD - Universal Patchlead with creation with

Configuration Assignments (1=Link made, 0=No Link)


J1	J2	J3	Systems	Connector
1	0	0	JVC	Jack
0	1	0	Beat	Wire
1	1	0	Clarion	Jack
0	0	1	Kenwood	Wire
1	0	1	Alpine	Jack
0	1	1	Panasonic	Wire
1	1	1	Sony/LG/Pioneer	Jack
1 (Pin12)	1 (Pin10)	0	Zenec	Wire

Pin Configuration

Pin 1	Description
1	empty
2	empty
3	empty
4	Analog 2 Swc
5	GND Swc
6	Analog 1 Swc
7	Link J3
8	Link J3
9	Link J2
10	Link J2
11	Link J1
12	Link J1

Examples:

- ALPINE** - J1 and J3 are connected
use the Jack to connect into the radio
- KENWOOD** - J3 is connected
use the round pin to connect into the radio
- ZENEC** - use one of the short wires
to connect the J1 (pin 12) with J2 (pin 10)
together (as in picture)

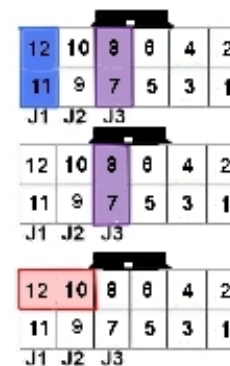

connection side view

